



LUCE X SNAC

CLEANING AND LOADING


PROGRAMMING

Handbook for cleaning and
loading personnel only

DAMIAN S.R.L. - VIA RAGAZZI DEL '99 N°30 - 21053 CASTELLANZA (VA) - ITALY



Updated to July 2008

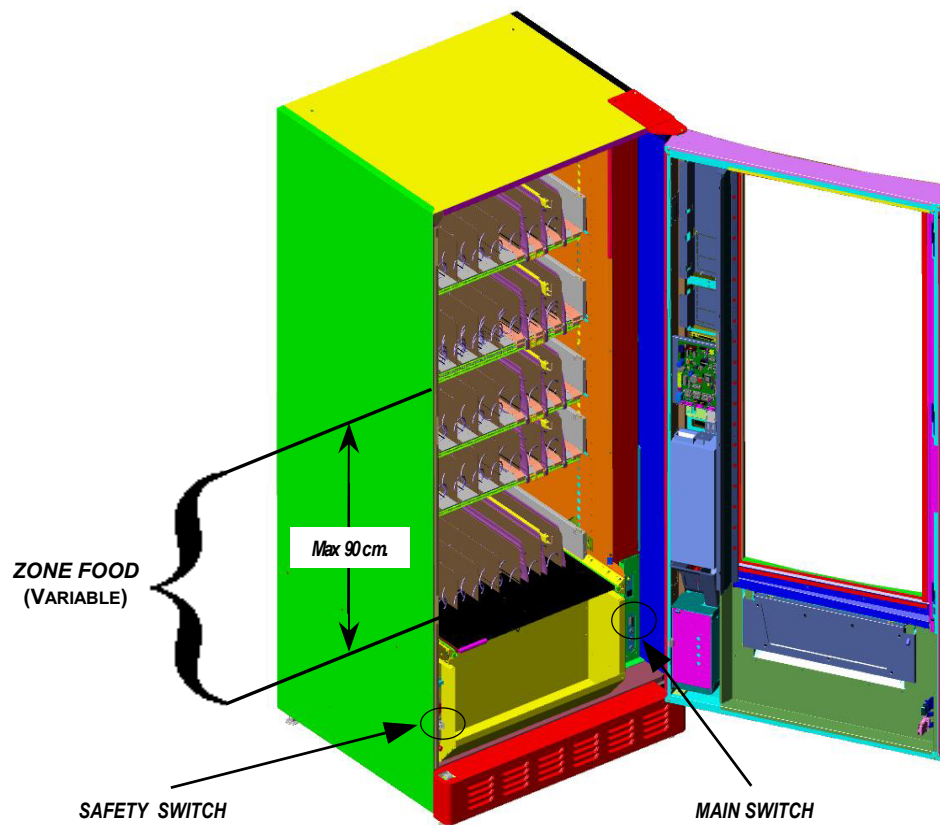- MAIN PARTS



PICTURE 1

LEGEND OF SYMBOLS

Symbol	MEANING
	Warning: necessary operation for people's safety
	Caution: the operation can damage the machine or cause its malfunctioning.


- **LOADING**

Before loading the vendor, read the **Programming Sheet** and check that no selections are off, in case of selections off check: that no products are out of place, condition and cleanness of the spiral, condition and integrity of the gearmotor and of the harness.

Open the vendor and pull out a section at a time, the first section on the top can be partially slipped after the extraction to make the loading easier (see picture 1).

Place the products in the right sections, interpolated in the spiral, some products require the application of rules (see picture 2).

Once finished the supplying of a section, put it back in its place, making sure of the right insertion (it must be on the same line of the other sections) and repeat for all the remaining sections.

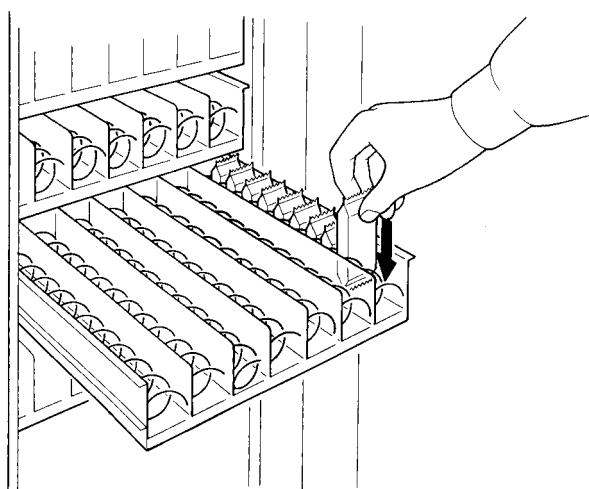

PICTURE 2

Once loaded the last section, close the vendor which will be ready for use.

- **LOADING PRODUCTS "FOOD ZONE"**

In order to guarantee the conservation of the products in sale the products for which the temperature of conservation in way in compliance with the enforced norms must be controlled must be load to you in the drawers inside with "Food Zone", zone represented from the first 90 centimetres maximum low of the distributor (see picture 1).

- **ALLOCATION OF THE SELLING PRICES:**

For the allocation of the selling prices see the enclosure **programming sheet**.

- **CLEANING OF THE VENDOR:**



Do not use petrol or other solvents to clean the vendor, these might damage its surfaces or adulterate the products.



Do not clean the vendor with water jets.
Switch off the vendor before cleaning it.



Check that all surfaces are dry before switching on the vendor again.

- PERIODICITY:

Symbol	Periodicity	Operation
●	Every loading at least once a week	Clean glasses and doors Clean the selling sections Clean the door and the outside surface of the vendor Safety switch check
◆	each month or after 700 h. of running	Clean inside of the vendor Clean the condenser grate

● **DOOR AND OUTSIDE SURFACE OF THE VENDOR**

To clean them use a cloth dampened with an industrial no foamy detergent.

● **GLASSES AND DOORS**

Clean the glass of the windows with detergent specific for glasses; clean the windows with a cloth dampened with alcohol.

● **SELLING SECTIONS**

The selling sections, spirals included, should be cleaned with a piece of cloth dampened with a not foamy detergent as the one used for the cooking planes or for the food ovens,. After the removal of any residue that can be found inside.

● **SAFETY SWITCH CHECK**



During the safety switch check follow carefully the instructions, avoid action not indicated.

Check the right functioning of the safety switch by opening and closing the door of the vendor when it is on, check that the neon lamp is off when the door is open and is on when the door is closed.

◆ **INSIDE OF THE BOX**

Clean the basket and the inside of the box with a cloth dampened with no foamy detergent like those used for cooking surfaces or for the ovens, after having removed every residue inside.

◆ **CONDENSER GRATE**

Clean the grate of the condenser of the refrigeration plant by removing the dust from the fins by means of a smooth brush, check that the dust does not damage or pollute the products inside the vendor.


LUCE X SNAC

Enclosure “A”

PROGRAMMING SHEET

This enclosure has to be combined with
the handbook and it is an integral part of it

PROGRAMMING METHOD

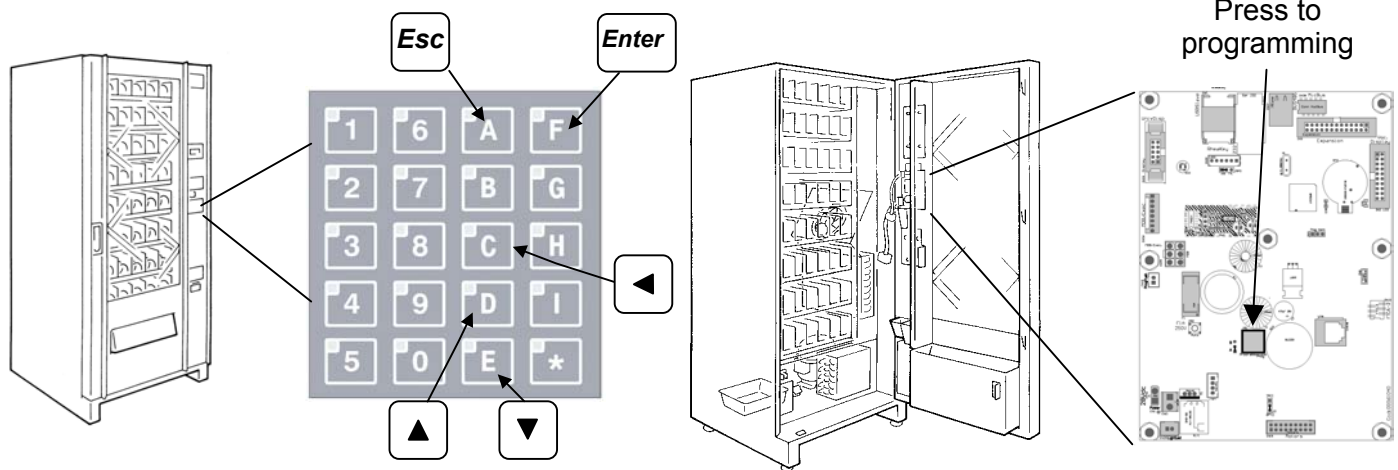

NORMAL STATE OF THE DISPLAY:

When the vendor is awaiting a sale, the indications of date and hour, available credit and (if qualified) date/time internal temperature of the vendor are sequentially visualised on the first line of the display, on the second line you can see the following writing running: "Insert credit, enter number and letter of selected product "

TO ENTER THE PROGRAMMING:

Open the vendor, feed it acting with the right key on the safety switch and press the button on the CPU card of the vendor (see picture above), avoid closing the vendor again in order not to damage the safety switch.



When the key is in the safety switch, do nothing different from the instruction given.

TO CHOOSE THE PARAMETER YOU WANT TO PROGRAM:

Select the menu acting on the buttons **D** (▲) or **E** (▼), on the second line of the display it will sequentially appear the writings relating to the different menus, until it starts again with "Products Prices"

When the writing relating to the menu chosen appears, press the button **F** (**Enter**) to confirm.

The name of the parameter will appear on the first line of the display, the value laid at the present time will appear on the second one. Select the parameter of the menu acting on the buttons **D** (▲) or **E** (▼), the writings relating to the different parameters of the menu will sequentially appear on the first line of the display, until it starts again from the first parameter.

When the writing relating to the wished parameter appears, press the button **F** (**Enter**) to confirm.

TO CHANGE THE PROGRAMMED VALUE OF THE CHOSEN PARAMETER:

If on the second line there is "***>" followed by the present value, without flashing figures:

Write the value wished through the keyboard or press the button **D** (▲) to increase or **E** (▼) to decrease the present value.

Press the button **F** (**Enter**) to confirm and return to the previous point.

If on the contrary there is "***>" followed by the present value with a flashing figure:

Press the button **D** (▲) to increase or **E** (▼) to reduce the flashing figure.

Press the button **C** (◀) to move a figure on the left, in order to start from the first on the right again.

Once all the figures have been inserted, press the button **F** (**Enter**) to confirm and return to the previous point.

TO EXIT THE PROGRAMMING:

Press the button **A** (**Esc**) to return to the choice of the menus.


Press for about 3 seconds the button on the CPU card of the vendor or press the button **A** (**Esc**) for some seconds or wait 120 seconds without pressing any button.

You will hear a short Beep and the display will be back to its normal condition, indicating the credit aid (if qualified) date/time and internal temperature.

Remove the key from the safety switch and close the vendor again, which is now ready for use.

- SELLING PRICE :

The 32 sale prices can be set as follows:

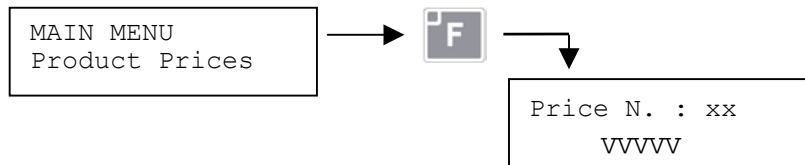

[default value: 2.00 for all selections.]

Press keys **D** and **E** to see the 32 available prices (xx which goes from 01 to 32)


Press key **F** to select the value "VVVVV" of the price to change, insert the new value by pressing the numbers on the keyboard, confirm the price by pressing **F** again.

Note 1 : if the value is not an exact multiple of parameter "Value of each step " (see farther) it will be automatically rounded off and it is necessary to confirm the new value again by means of key **F**

Note 2 : default = value automatically used by a new or reset card

Once the sale prices are set, it is possible to combine them to the available selection as follows:

- PRICES ASSOCIATION:

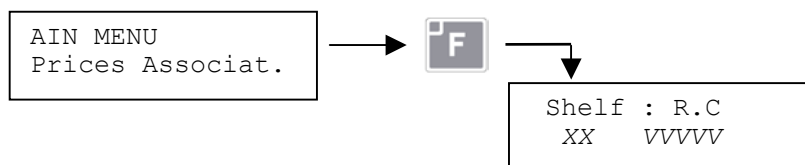

Where **L** (line) indicates the number of the section (from below) and **C** (column) indicates the column from left.

Example: selection corresponding to the lowest section, first column from the left: **1A** last column on the right: **1G**;

selection corresponding to the third section from below, fourth column from the left: **3D**, the penultimate column on the right: **3F**

xx is the current price and VVVVV the combined value.

Pressing **D** and **E** you can skim through the 32 available selections

Press **F** to change the combination with the sale price for the current selection; skim through the price list by means of **D** and **E**, select the desired price and confirm by pressing **F**.

SUMMARY TABLE:

Menu	Parameter	Meaning	Min-Max	Adjusted at (*)	Default
Products Prices	Price N. : xx	The 32 sale prices	0 ÷ 99950	----	2.00
Prices Associat.	Shelf : L.C	Selling price (line) L, column C	0 ÷ 32	----	01

(*) MEMORANDUM TO FILL AFTER THE PROGRAMMING

NOTE: "Default" = Value used automatically by a new and not programmed card or by a reset card